



# Assembly guide

User's manual - Manuel d'utilisation-Gebruikershandleiding  
Benutzerhandbuch - Manuale dell'utente - Manual de usuario  
Руководство пользователя - Użytkownik Manual



 [www.vulkangear.com](http://www.vulkangear.com)

 [vulkangear](https://www.instagram.com/vulkangear)

## PACKAGE CONTENTS

quantity	parts name
01	Cushion
01	Main back frame
02	Back cushion soft bag
01	headrest
05	wheels
01	Base
01	gas lift
01	gas lift cover
01	Mechanism
04	M6*40 screw
03	M8*16 screw
02	M6*16 screw
02	Headrest cover
01	wrench

## SAFETY INFORMATION



Do not push the chair around when a person is sitting in it



Do not push down on the backrest when a person is reclined



Do not use the chair with more than one person



Do not place all your weight on the backrest only



Do not stand on the chair



Do not sit at the front edge of the chair



Sit in the center of the chair, with your back to the backrest

The recommended weight is: <150kg

The chair should only be used as intended and in a non-abusive manner.


## STEP 1



Complete box.



Open the box with a box opener.

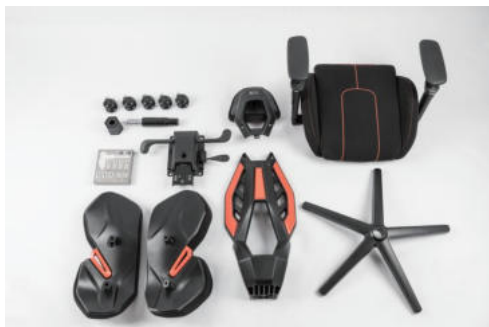

Slowly take out the accessories in the box one by one.



Lay out all accessories from the box neatly.

## STEP 2



Assembly the wheels.

## STEP 3



Put in the gaslift.

## STEP 4



Put on the gaslift cover.

## STEP 5



The mechanism corresponds to the hole positions of the seat cushion. Use 4 pcs M6\*40 screws for assembly.

## STEP 6



Pick up the main back frame and align it with the functional tailsupport plate. Then, use 3pcs M8x 16 screws for assembly.

## STEP 7



Connecting mechanism and gaslift.



## STEP 8



Carry out flipping and place it stably (this step requires a strong person or two people to complete).

## STEP 9



Put the chair gently on the ground.

## STEP 10



Pick up the back cushion soft bag and align it with the hooks on the left and right sides of the back bracket respectively, and then press it all the way down until it is firmly installed.

## STEP 11



Pick up the headrest and align it with the top of the backrest before installing it securely use 2 pcs M6 x 16 screws. Assemble accordingly.



## STEP 12



Cover the blanking cap.

## STEP 13



Clamp the wrench at the position as shown in the figure for the next use. The product assembly is completed.


## USAGE INFORMATION



The headrest can be moved up and down and can be flipped.



The backrest has a twisting function. The backrest can twist outward and inward to fit your back.

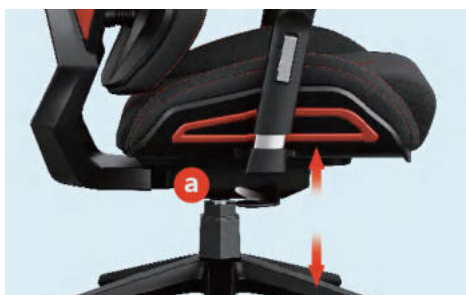

Pull up **a** upwards, and the seat cushion can be adjusted up and down.



Pull down **b** to lock the mechanism so that the backrest cannot be reclined. Pull **b** up to unlock, and the backrest can be reclined backward. Pull up **c** to make the seat cushion slide forward and backward.



20°	4.5CM	7CM	360°	40°
Folding function	CM forward	CM up	rotate	rotate for
for armrest	and backward	and down		armrest surface.
surface	for armrest surface			